

**5161
Console/Power
Supply**



Console Labeling Instructions

99049-1

**Digital
Controls**

Digital Controls Corporation
305 Pioneer Boulevard
Springboro, Ohio U.S.A. 45066-1100
Telephone: (513) 746-8118

TYPICAL SYSTEM INTERCONNECTIONS

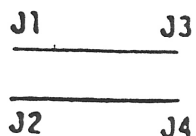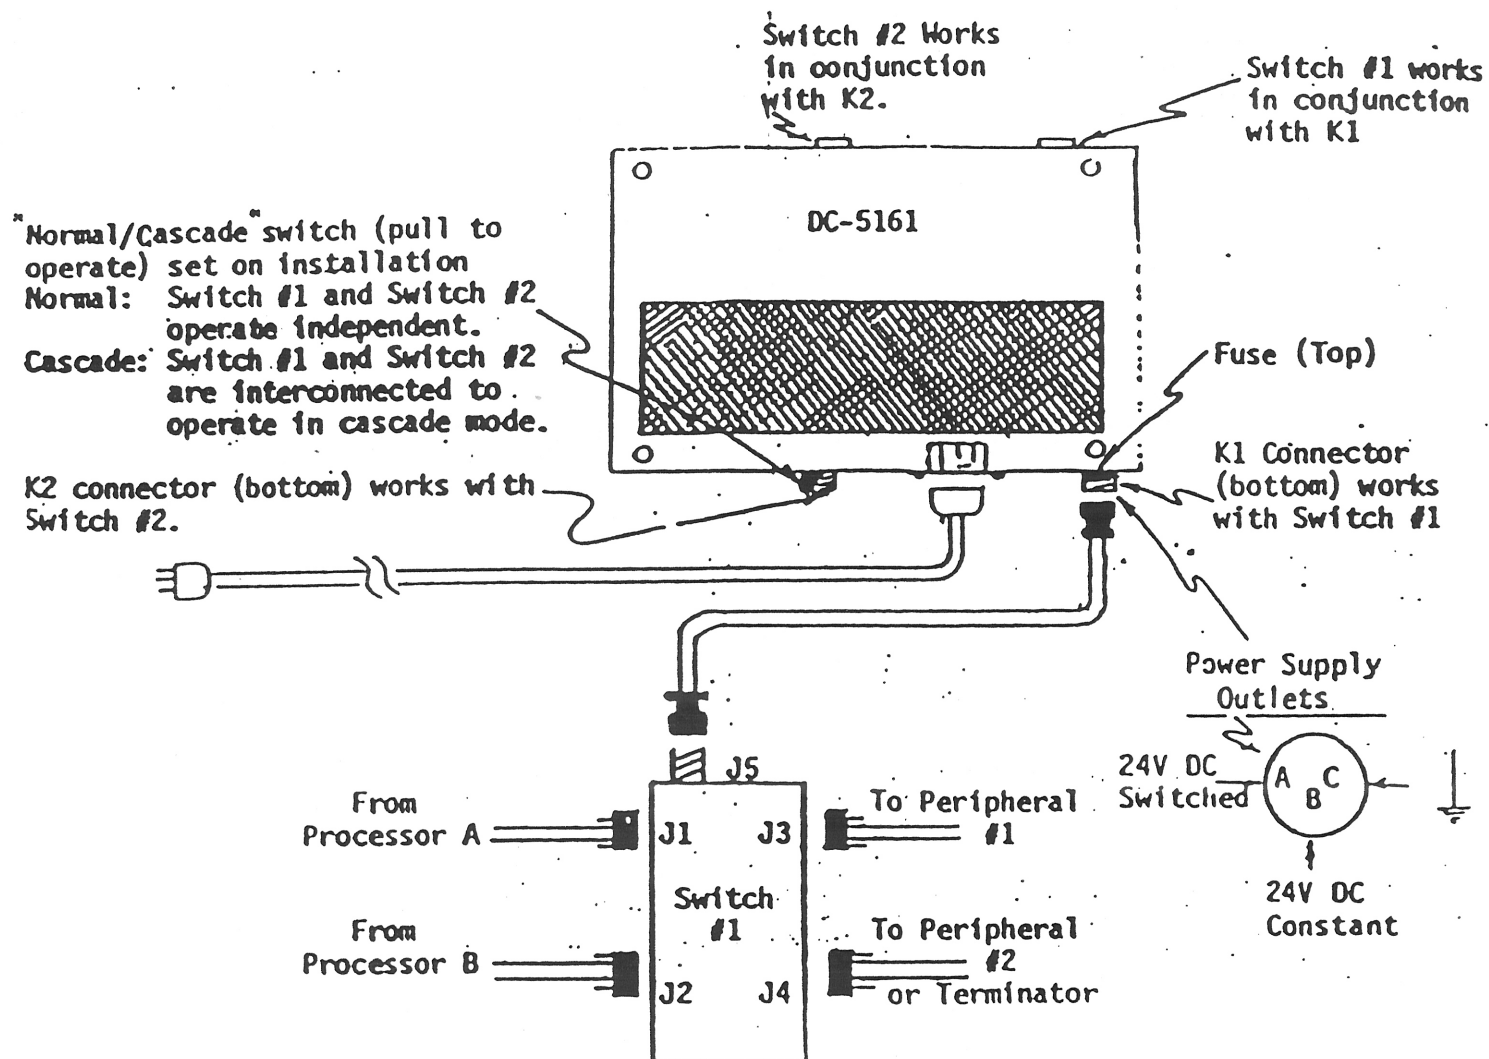

Console Switch DOWN:

J1 is connected to J3
J2 is connected to J4





Console Switch UP:

J1 is connected to J4
J2 is connected to J3



Ⓣ = Terminator

2x1:

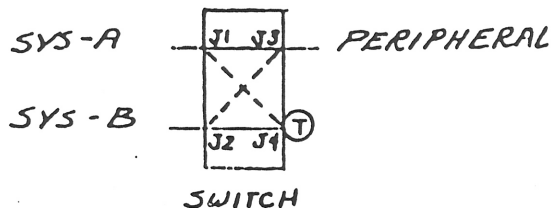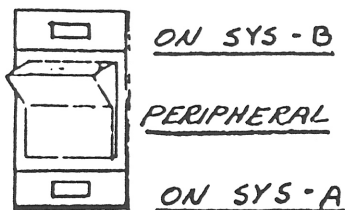




SWITCHES ONE PERIPHERAL TO EITHER PROCESSOR.

2x2:

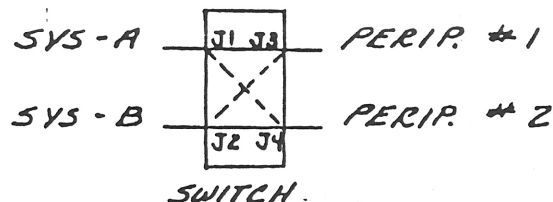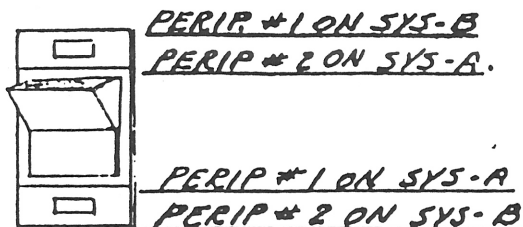

MUTUALLY EXCLUSIVE CONFIGURATION: SWITCHES TWO PERIPHERALS BETWEEN TWO PROCESSORS USING JUST ONE SWITCH. BOTH PERIPHERALS MAY NOT BE CONNECTED TO THE SAME PROCESSOR.

CASCHDE:

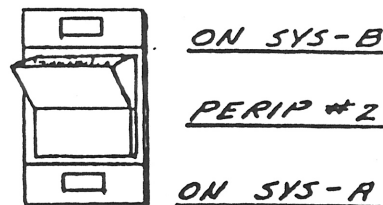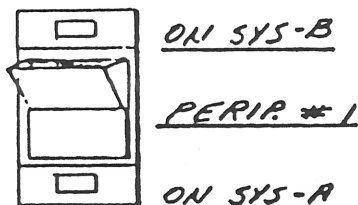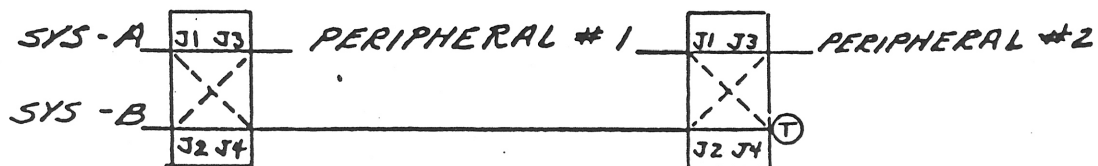

THIS CONFIGURATION USES ONLY ONE COMMON TRUNK IN EACH PROCESSOR AND ALLOWS YOU TO HAVE EITHER OR BOTH PERIPHERALS ON EITHER PROCESSOR. CONSOLE SWITCHES MUST BE MODIFIED TO FUNCTION IN THE CASCADE MODE.

* CONSOLE SWITCH DOWN

J1 J3

J1 IS CONNECTED TO J3

J2 IS CONNECTED TO J4

J2 J4

CONSOLE SWITCH UP

J1 J3


J1 IS CONNECTED TO J4

J2 IS CONNECTED TO J3


J2 J4

T = TERMINATOR

* DOES NOT APPLY TO SECOND SWITCH OF A CASCADE.

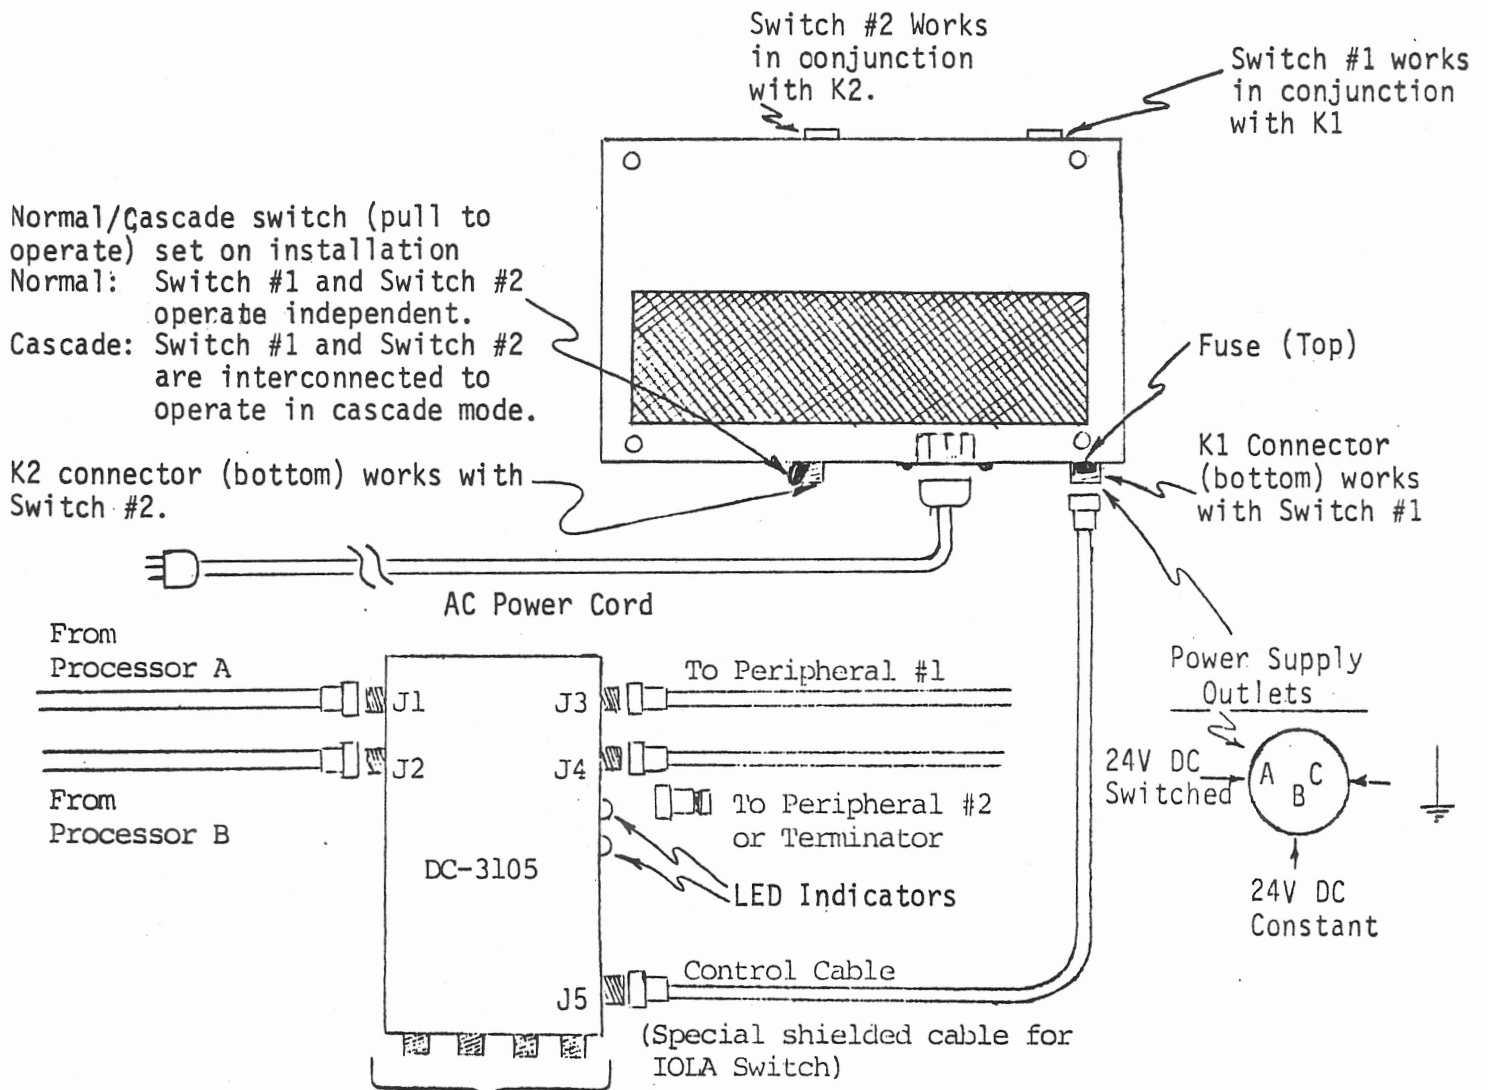

Splice Box connectors used to eliminate the IOLA Switch for Trouble Shooting

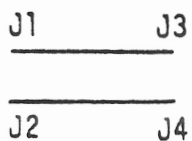




Console Switch DOWN:
 J1 is connected to J3
 J2 is connected to J4




Console Switch UP:
 J1 is connected to J4
 J2 is connected to J3

Ⓣ = Terminator

REMOTE CONTROL CONSOLE
WITH INTEGRATED POWER SUPPLY

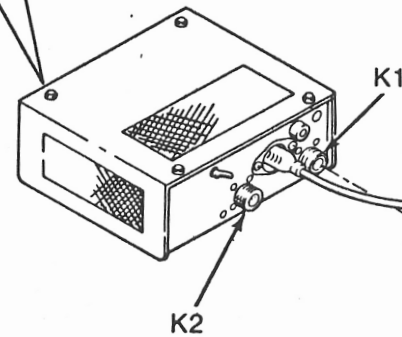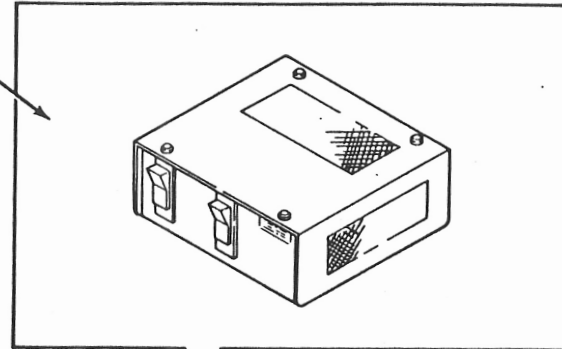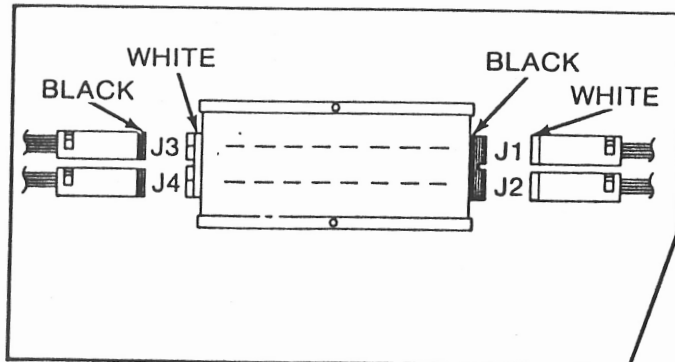

115 VOLT
CONVENIENCE
OUTLET

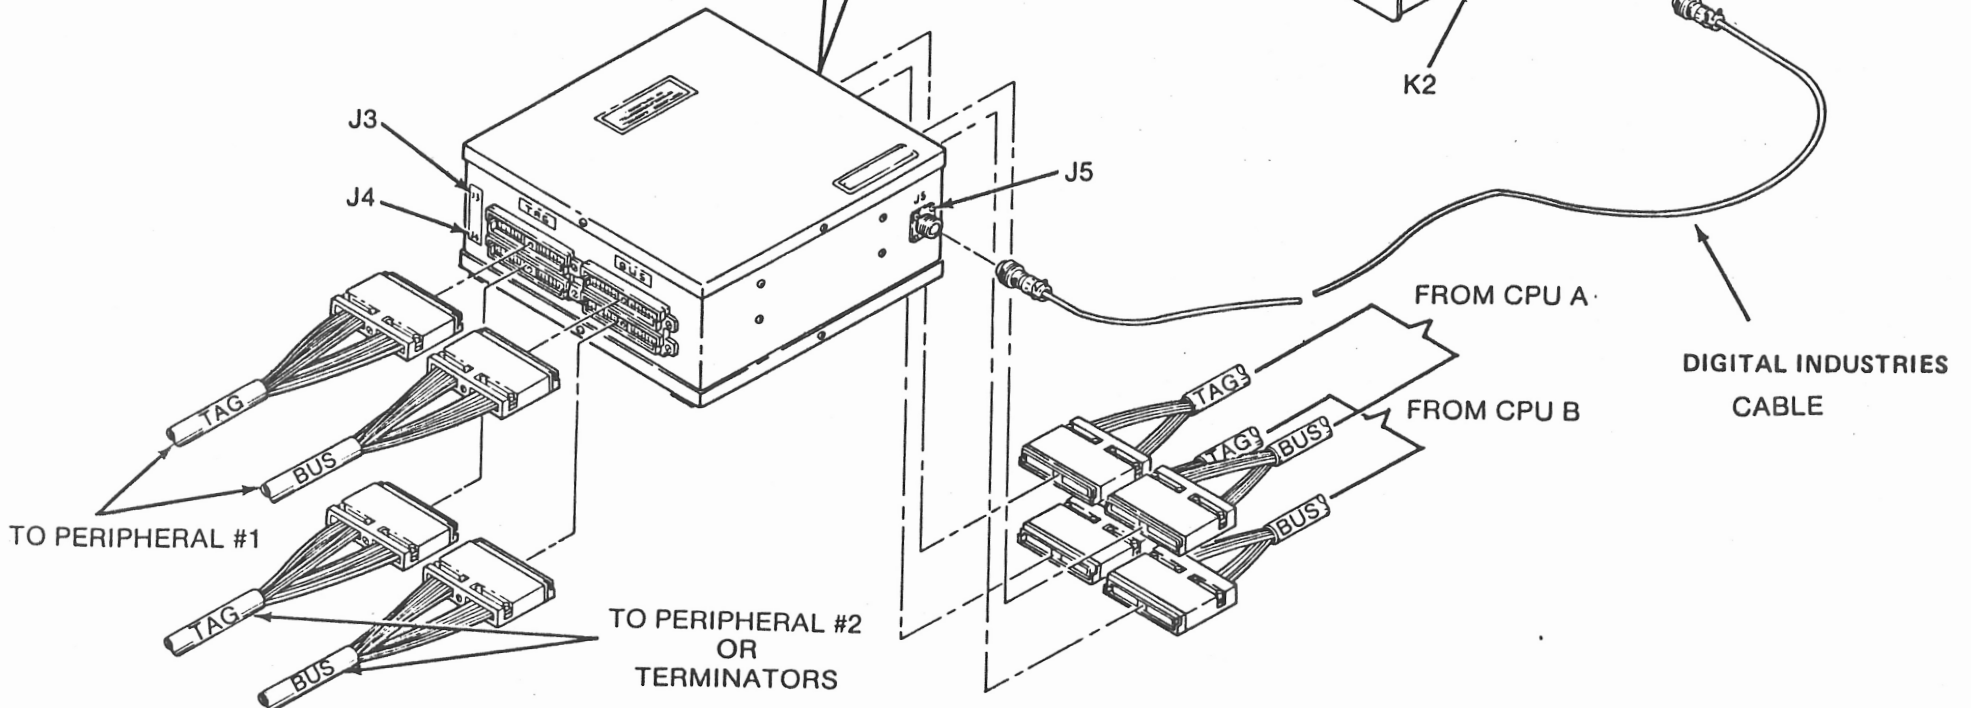

For Service and Support Call
(513) 746-8118
(513) 743-8575 (Fax)

Or Use Our Toll Free Number
1 800 421-0203
